


## Back Panel

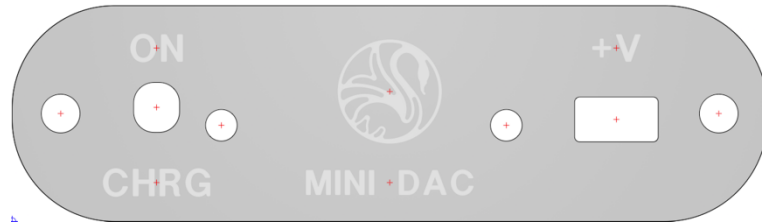


- Connect the +V to the USB charger using the USB mini cable
- ON / CHRG – Up to Play and down to Charge
- CHRG – Lit when charging (next to USB)
- STAT – Relative battery level. When dim recharge batteries
- 95% Charge can be reached in 4 hours
- Run time is 10 to 11 hours

## Operating Instructions

- Connect the music source into the corresponding connector on the front panel
- For USB check the connection on the PC at:
  - Windows / Control Panel / Audio
  - MAC Utilities / MIDI
- If using USB and the source does not recognize the USB Codec:
  - Disconnect the USB source cable
  - Reconnect the USB source cable
  - Wait 15 seconds
  - Swan Song Audio has tested a variety of USB sources but cannot guarantee compatibility with all USB sources
- Place the far left source select switch, on the front panel, to match the desired input
- Connect preamplifier or amplifier using the 3.5mm phone cable into OUT jack on the front panel
- Place the ON switch on the back panel in the UP position
- Start the music on the music source
- Audio is upsampled to 24 bit 96kHz
- To Charge use the charging block and rear USB connector with the CHRG switch on the back panel in the Down position

## Front Panel

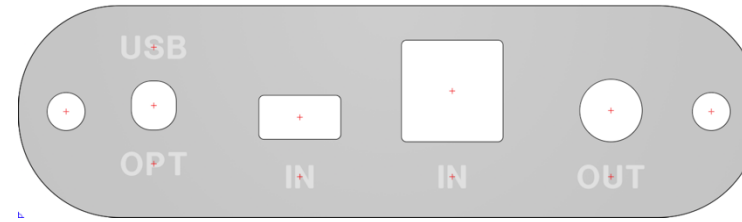

- USB / OPT – Source select switch
- IN – The following IN connector options are supported
  - USB mini – Connect to a PC, Tablet, Smart Phone USB out, or iPhone camera kit with and IPAD and iPhones
  - TOSLINK – Connect to CD Player, TV, or PC with optical out
- OUT – 3.5mm stereo phone connector

## Cautions Warranty

- Do not expose the DAC / amplifier to liquids or to temperature extremes as deemed by Swan Song Audio
- Electromagnetic interference will affect the performance
- Do not charge with more than 5 volts DC via USB
- Clean metal with “Windex” and a micro cloth
- The warranty period is 1 year from the date of purchase for manufacturing defects and not for wear and tear caused by usage or negligence, as deemed by Swan Song Audio
- Opening is only permitted to change the battery back using the instructions supplied with the battery
- Follow all LION Battery precautions
- Violating the cautions voids the warranty
- The unit can only be serviced by directly or with instructions from Swan Song Audio
- Contact Swan Song Audio for service or any warranty questions
- Repairs deemed by Swan Song Audio as outside the warranty will be handled by Swan Song Audio at the owners expense

