

Operating Instructions

- To move the Monitor and Extension long distance or unpack
 - Remove the Extension back panel
 - Remove the 4 bolts connecting the Monitor to the Extension
 - Lift the Monitor off of the Extension (use the top handle)
 - Remove the top handle off of the Monitor
 - Place a piece of ½ inch foam cushion in the back floor and opening of the Extension to cushion the Monitor top
 - Turn the Monitor upside down and insert it into the Extension speaker drivers first
 - Attach the 4 connecting bolts through the top of the Extension into where the Monitor feet were and tighten to hold the Monitor in Place
 - Attach the back panel of the Extension. The port holes should be aligned
 - To unpack do these steps in reverse
- To connect the Monitor and Extension together
 - Remove the Extension back panel
 - If the panel is swollen shut then remove the port before pulling on the port hole
 - Partially remove the Monitor back panel such that the bottom of the back panel remains inside the Monitor rear frame so that the speaker jack wires are not strained
 - If the panel is swollen shut, then remove the port before pulling on the port hole
 - Remove the plug from the Monitor floor
 - Use this time to inspect and make sure that there is no loose wiring
 - Attach the Monitor back panel
 - Remove the Monitor feet
 - Place the Monitor on top of the extension such that the 2” connection holes line up
 - Insert and tighten the bolts from inside the Extension into where the Monitor feet were located
 - Attach the Extension back panel
- To move the Monitor and Extension short distance
 - If desired attach handles and acquire assistance to carry the monitor and extension
 - Placing moving glides under the Extension’s feet aids in the moving process by allowing it to slide
- Begin port placement 6 to 9 inches from the wall and then begin adjusting for the desired bass response

Cautions Warranty

- If Tung Oil finish was ordered, scratches can be made less visible by applying Tung oil, via a cloth, and wiping off the excess after 4 hours
- Both the Tung Oil and Lacquer finishes can be cleaned with most furniture wipes but consult the furniture wipes directions and cautions before usage
- Clean grill covers with “Windex” and a micro cloth
- Do not expose the Monitor and Extension to liquids or to temperature extremes as deemed by Swan Song Audio
- Maintain a humidity of 30% to 50% to prevent the wood from drying and the seams from splitting
- Do not remove the speaker grills as the bolts also hold the drivers in place. Attempts to remove the grills can cause severe damage
- Do not touch, poke or allow foreign objects to enter the speaker driver areas as damage may result
- Do not change or add speaker stuffing. The inside of the cabinet has been optimized to provide a resonance similar to a wood based instrument. Adding stuffing will result in a dead speaker. Removing stuffing will result in too lively of a speaker
- Do not stick foreign object into, plug, or alter the port holes. Doing so will adversely affect the lower frequency extension
- Do not place the speakers near sources electromagnetic or radiated interference. Doing so will alter the sound
- The warranty period is 3 years from the date of purchase for manufacturing defects and not for wear and tear caused by usage or negligence, as deemed by Swan Song Audio
- Violating the cautions voids the warranty
- The unit can only be serviced by Swan Song Audio
- Contact Swan Song Audio for service or any warranty questions
- Repairs deemed by Swan Song Audio as outside the warranty will be handled by Swan Song Audio at the owners expense

